

Dry Ironing

To iron without steam, slide the steam control lever to the off position. We recommend dry ironing with an empty tank. Set the temperature for the type of material to be ironed.

Anti Calc System

Minerals in water can build up in the steam chamber. The Anti Calc system contains a special resin that neutralizes the harmful minerals. This system is designed to extend and maintain the high steam performance of the iron. The cartridge is not replaceable.

Note: Do not use descaling agents in your iron.

Anti-Drip System

In order to produce steam, all irons require a high temperature. If the soleplate is not hot enough some of the water will not turn to steam and can spit or leak from the soleplate. The anti-drip system automatically switches off the steam when ironing at low temperatures to prevent spitting.

After Ironing

- 1. Turn the temperature dial to the min setting. Slide the steam lever to the no steam position.
- 2. Unplug the appliance.
- 3. Place the iron on its heel and allow to cool completely.
- 4. Empty water from the appliance before storing. We recommend emptying the iron when not in use.
- 5. To protect the soleplate, we recommend storing iron on its heel.

Cleaning and Maintenance

Before cleaning ensure that the appliance is unplugged and completely cooled down.
Never use household cleaners, abrasive cleaning pads or solvents.

Cleaning the Soleplate

Rowenta soleplates have excellent non-stick properties and can be wiped clean when cold.

- In normal use a draggy coating may build up on the soleplate (starch, detergent build-up, burnt synthetic fibers). This can be easily removed by using the Rowenta Soleplate Cleaning Kit or a quality hot iron soleplate cleaner available at most stores. The Rowenta kit is also available through our website: www.rowentausa.com
- To prevent scratching of the soleplate, do not iron over sharp objects (zippers, etc.). Do not place the iron on rough surfaces, e.g. metal iron support, which may scratch the soleplate.

Troubleshooting

Issues	Possible causes	Solutions
Iron does not heat.	The temperature control is set too low.	Set the temperature control to a higher temperature.
	Not properly plugged in.	Check that iron is plugged in correctly.
	Auto-off has engaged.	Move iron or shake it gently to reactivate.
LED Light Display System does not light up (depending on model).	Temperature control is set to minimum.	Set the temperature control to a higher setting.
Not enough steam.	There is insufficient water in the tank.	Fill the water tank.
	Iron is not set to a steam setting.	See section called "Steam Ironing".
LED Light Display System is flashing red – yellow – green (depending on model)	Auto-off has engaged.	Move iron or shake gently to reactivate.
Iron is emitting a brown or white substance.	Water may need to be changed due to hardness or organic matter.	See section "Water Recommendations". Switch to spring water or mix tap water with distilled water.
	Brown streaks come through the holes in the soleplate.	See section "Water Recommendations". Switch to spring water or mix tap water with distilled water.
Iron is leaking.	Garment has not been rinsed sufficiently.	Ensure garment is rinsed thoroughly to remove any detergent deposits or chemicals on new garments.
	Over use of burst button.	Allow more time between each burst.
	Distilled or softened water being used.	See section "Water Recommendations". Switch to spring water or mix tap water with distilled water.
Build-up on the soleplate.	Overfilled.	Do not fill past max line on tank. Be sure to close filling inlet.
	Starch use.	Spray reverse side of fabric and allow starch to penetrate.
	Burnt material. Ironing at too high a temperature.	Be sure to set temperature according to fabric being ironed.
Spray function does not work.	Priming may be necessary on first use.	Hold cold iron horizontally. Fill with water. Place finger over the spray nozzle to create a vacuum. Press the spray button 4 to 5 times. Remove finger from nozzle, press spray button a few more times.

If troubleshooting does not assist, before consulting the retailer regarding their return /exchange policy, please telephone consumer service at 781-396-0600.

In the interest of improving products, Rowenta reserves the right to change specifications without prior notice.

LIMITED WARRANTY

This Rowenta product is warranted against defects in material and workmanship for one year from the initial purchase date. During this period any Rowenta product owned by the original purchaser that, upon inspection by Rowenta, is proved defective, will be repaired or replaced, at Rowenta's option, without charge to the customer. If a replacement product is sent, it will carry the remaining warranty of the original product. This warranty does not apply to any defect arising from a buyer's or user's misuse of the product, negligence, failure to follow Rowenta's instructions, use on current or voltage other than stamped on the product or alteration or repair not authorized by Rowenta. Repair or disassembly by anyone other than a Rowenta authorized service center will void the warranty. THE WARRANTIES SET FORTH HEREIN ARE EXCLUSIVE AND NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE, ARE MADE BY ROWENTA OR ARE AUTHORIZED TO BE MADE WITH RESPECT TO THE PRODUCT. ROWENTA'S SOLE OBLIGATION IN THE EVENT OF A DEFECTIVE PRODUCT SHALL BE TO REPAIR OR REPLACE, IN ROWENTA'S SOLE DISCRETION, THE DEFECTIVE PRODUCT. IN NO EVENT SHALL ROWENTA BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL LOSSES OR DAMAGES (INCLUDING BUT NOT LIMITED TO INTERRUPTION OF BUSINESS OR LOSS OF BUSINESS OR PROFIT) RESULTING FROM THE USE OF OR INABILITY TO USE THE PRODUCT, ANY BREACH OF WARRANTY OR ANY DEFECT IN THE PRODUCT EVEN IF ROWENTA SHALL HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH POTENTIAL LOSSES OR DAMAGES. If you believe your product is defective, bring the product (or send it, postage prepaid) along with proof of purchase to the nearest authorized Rowenta Service Center (see below). If you send the product, please include a letter explaining the nature of the claimed defect.

Rowenta Inc.
196 Boston Avenue
Medford, MA 02155
Tel.: (781)396-0600
www.rowentausa.com
OFFICE LOCATION ONLY.
To service product see service center information below.


If your appliance needs service, ship the product to your nearest regional service center. Be sure to put your name on the outside of shipping box (no P.O. boxes please). If in warranty, Rowenta will repair or replace product at their discretion. If the product is out of warranty, you will be advised of the cost of repair before any work begins.

Our main service centers are listed below:

Turnpike Appliance 3495A Lawson Blvd. Oceanside, NY 11572 516-483-5596	Authorized Appliance 1644 West Ogden Ave. Downers Grove, IL 60515 630-852-1550
---	---

Service center information is subject to change. Please visit our website at www.rowentausa.com or call our **service center information line** at 781-306-4620. The information line provides current service center information and listings in California.


ROWENTA
PERFECT

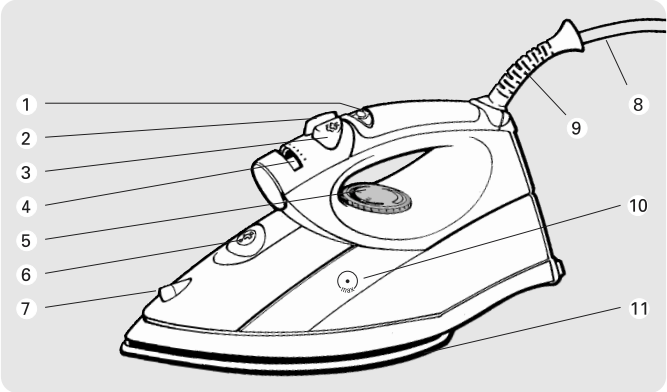

Appliance description

- | | |
|---|--|
| 1 Thermostat light (mechanical model) | 6 Filling inlet (with push-button opening) |
| LED Light Display System (electric model) | 7 Spray nozzle |
| 2 Spray button | 8 Cord |
| 3 Power steam button | 9 Cord support |
| 4 Variable steam control | 10 Water tank with maximum water level indicator |
| 5 Temperature control dial | 11 Soleplate (depending on model) |

Electronic

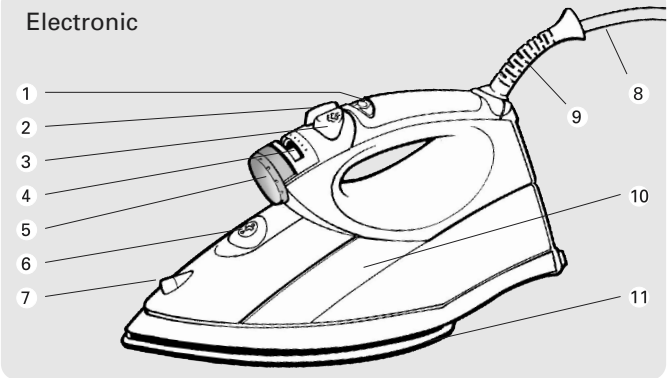

IMPORTANT SAFETY INSTRUCTIONS

When using this appliance, basic safety precautions should always be followed including the following:

Read all instructions before using this product.


- Use appliance only for its intended use.
- To protect against a risk of electric shock, do not immerse the appliance in water or other liquids.
- The appliance should always be turned off before plugging or unplugging from outlet. Never yank the cord to disconnect from outlet, instead grasp plug and pull to disconnect.
- Always disconnect appliance from electrical outlet when filling with water or emptying when not in use.
- Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
- Do not operate appliance with a damaged cord or if appliance has been dropped or damaged.
- To avoid the risk of electric shock, do not disassemble the appliance. Ship it to the nearest authorized Rowenta approved service center for examination and repair. Incorrect reassembly can cause a risk of electric shock when the appliance is used.
- Not intended for use by children. Close supervision is necessary for any appliance being used near children. Unsupervised use can result in fire or personal injury. Do not leave appliance unattended while plugged in, on an ironing board, or while it is still hot.
- Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down. There may be hot water in the reservoir.
- Do not direct steam at people, animals or iron clothes while they are being worn.
- The use of accessory attachments is not recommended by Rowenta and may result in fire, electric shock or personal injury.

SPECIAL INSTRUCTIONS

- This is a 1600 watt appliance. To avoid a circuit overload, do not operate a high wattage appliance on the same circuit.
- If an extension cord is absolutely necessary, the marked electrical rating should be at least as great as the electrical rating of the appliance. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over unintentionally.
- Your Rowenta appliance is intended for household use only.

SAVE THESE INSTRUCTIONS

Before use

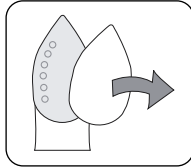


- **Remove soleplate cover before using iron.** Remove all packaging from the iron.
- Please read all of the instructions for use and the Important Safeguards carefully.
- It is normal for a small amount of smoke and a light odor to be produced the first time it is used. This will quickly disappear.

Helpful Hints

- When ironing start with fabrics that require a low temperature setting (•) and finish with those which need the highest temperature (•••).
- Mixed fiber fabrics should be ironed on the temperature for the most delicate fabric. For example a shirt that is 60% cotton and 40% polyester should be ironed at the (•) setting for synthetics.
- If spray starch is used, spray it onto the reverse side of the garment. Allow starch to penetrate before ironing by setting garment aside for 30 seconds.
- For best results, use a mesh type ironing board to allow excess steam to escape.
- For delicate fabrics, we recommend carrying out a test on an unobtrusive area of the garment such as an inner seam.
- Adhere to manufacturer recommendations on garment label.


Light Display System (depending on model)

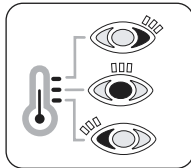


Some models of the Perfect iron are equipped with an LED Light Display System. This system will inform you when the iron is heating and when it has reached ideal temperature. It will also notify you when the auto-off feature has engaged.

Colour	LED display	This means:	What to do
YELLOW		The soleplate is not hot enough.	Allow iron to finish heating.
GREEN		The soleplate is at the right temperature for the selected material.	You can start ironing now. The soleplate is at the optimum temperature for your material.
RED		The soleplate is still too hot for the selected material.	Wait for the iron to cool down to the selected temperature and the LED display to switch to GREEN.


3 Way Auto-Off (depending on model)

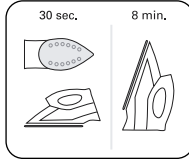

 If your iron is equipped with auto-off and the iron is not moved while it is plugged in, an internal safety switch will turn it off. It will turn off in 8 minutes if left vertically or in 30 seconds if left on its soleplate or tipped over.




Models equipped with auto-off system –
A red light will flash when the auto-off feature has engaged. To deactivate feature, move the iron or shake it gently. Wait until iron is fully reheated before use.

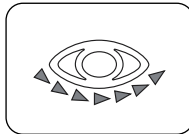

Models equipped with LED Display System –
The LED Light Display System will flash all 3 colors alternately when the feature has activated. To deactivate feature, move the iron or shake it gently. Wait until iron is fully reheated before use.

Auto-Off is not an on/off switch. Always unplug when not in use.

Filling

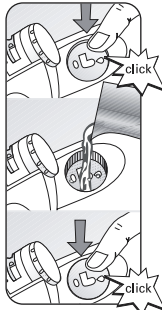

- Ensure the iron is unplugged.
- Slide the variable steam lever to the left (min).
- Rest iron on heel and tilt it forward approximately 1 inch. Open the water filler inlet by pressing the push-button. You will hear it click open.
- Fill with water to the max mark on the water tank. We recommend using a water pitcher rather than filling under the tap. Iron holds approximately 13 oz of water.
- Close the filling inlet by pressing the push-button. Be sure to close before returning to the horizontal position.

If you need to add water during ironing, unplug the iron and follow the steps above. Ensure iron heats back to temperature:
– indicator light turns green on models with LED Light display system
– light will go out on irons not equipped with the LED Light display system.

Water Recommendations

Tap water

Rowenta irons are designed to be used with REGULAR TAP WATER (up to 12 grains of hardness). If your water is harder than this, Rowenta recommends mixing half tap water with half distilled water which reduces the hardness; or just use bottled spring water. Never use 100 % distilled water as this can cause the iron to spit and leak.

Softened water

There are many types of household water softeners and the water from many of them is perfectly acceptable for use in an iron. However, some types of softeners, particularly those that use chemicals such as salt, can cause the appliance to leak or spit during use. If you experience this type of problem, we recommend that you try using bottled spring water or untreated tap water. Never use 100 % distilled water.

Once you have changed water it will take several uses to correct the problem. Rowenta recommends trying the steam function for the first time on an old towel or cloth that can be discarded to avoid damaging your clothes.

Iron and other impurities


If your water supply contains large amounts of iron or organic matter, these minerals can collect inside the appliance and eventually appear as brown stains. If you experience these problems Rowenta recommends using bottled spring water. Never use 100 % pure distilled water.

Always remember:

Battery water and water containing additives (such as starch, perfume or fabric conditioner condensed water from driers) may not be used. Such additives can affect the properties of the steam and, at high temperatures, can form deposits in the steam chamber, which will mark the laundry when they are emitted through the steam vents.

Descaling liquids / agents should not be used.

Selecting the Temperature

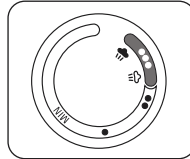


Models equipped with a temperature dial –
Set the temperature control dial according to the fabric you are ironing. Check the garment's label for appropriate setting. We recommend using the chart below as a guide. Light will be on as iron is heating. When light goes out iron is ready to use.

Ironing label	Fabric	Temperature control
	Synthetics e.g. polyester, silk, viscose	●
	Wool	● ●
	Cotton, linen	● ● ●

Models equipped with Electronic Temperature Control (Thermo Control)

 The iron has an electronic sensor that monitors the temperature of the soleplate and ensures it is accurate. The thermostat light will be yellow as the iron is heating. Once the correct temperature is reached the light will turn green. We recommend using the chart below as a guide to set the iron:




Steam Ironing



WARNING: Never iron or steam clothes while they are being worn. When iron is placed on heel, it will burst one more time before Intra Steam stops. Use caution and do not direct soleplate at people, animals, etc.

Before ironing for the first time fill iron and allow to heat. The iron should be allowed to emit steam for at least 1 minute to remove any impurities. Meanwhile press from time to time the burst of steam button. This should also be done if iron isn't used regularly.

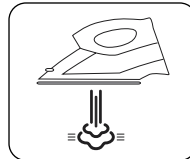


Intra Steam (depending on model) –

The Intra Steam system generates higher steam pressure to enable the steam to penetrate faster and deeper into the fabric. The steam is emitted in frequent bursts rather than continuously. The pressure generated will cause a burst noise. This is normal. As this steam is so powerful and concentrated,


you may opt not to keep the steam on the maximum setting. If you choose to keep it on maximum, more frequent filling will be necessary. To set the intra steam level, move the steam lever to the desired setting.

With the intra steam system, steam can be produced from •• temperature setting the colored position on dial to the ••• setting. Maximum steam setting should only be used when the iron is set to the highest temperature setting (•••). Steam will be produced when the iron is used horizontally.

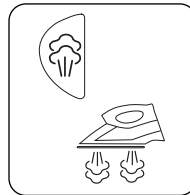


Burst of Steam – This feature is ideal for removing stubborn wrinkles or pressing in sharp creases.

When the temperature control is set to a steam setting (•• or •••) the burst of steam can be used. Press the button to generate a burst of steam. Leave an interval of at least four seconds between bursts.

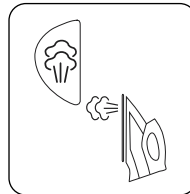

Vertical Steam – This feature is ideal for hanging clothes, drapes, curtains, etc.

When the temperature control is set to a steam setting vertical steam can be used. To use feature, hold iron vertically with the tip tilted forward slightly. Press the burst of steam button repeatedly while moving iron from bottom of garment to top. If vertical steam output starts to decrease tilt iron forward to a horizontal position and then back to vertical to continue.

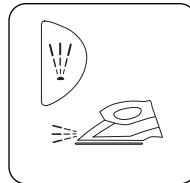

Spray Setting

This feature is ideal for stubborn wrinkles or set in creases. Ensure there is water in the tank then press the spray button. Do not spray silk.